

2. Need Inverting please selection "On". Need Non-Inverting please selection "OFF". Press "ENTER" to confirm. Press "ESC" to exit.

## TO SET SOUND CONTROL EXCITATION:

1. Press "ENTER", then press "UP" or "DOWN" to choose "ON" or "OFF"
2. "ON" means run sound control. Audio signal lights follow with music to flash. "OFF" means auto control.

## TO SET THE DMX CHANNEL CONFIGURATION:

1. Press "UP" or "DOWN" to show all the menu items.
2. Press "ENTER", then press "UP" or "DOWN" choose "nod.1" or "nod.2" press "ENTER" to confirm or press "ESC" to exit.  
nod.1: (mode 1): the normal channels control.  
nod.2: (mode 2): the less channel control.
3. Set the DMX to "nod.1" to accept master/slave synchronous.

## Service Functions

### TO RESET THE FIXTURE:

1. Press the "Mode" button until the display show.
2. Press ENTER to confirm your selection.

## OPERATION

### Auto Mode And Sound Mode Operation

#### Stand-Alone Mode (Auto Mode):

. OFF means Auto control.

To set the fixture in auto mode, When display R.001 ———> Press UP 4 times to confirm display reads RUd1 ———> confirm the display reads .OFF ———> press Esc to confirm the display reads R.001 ———> press UP 5 times to confirm display reads .E5L ———> Press "Enter" 2 times to confirm display reads R.u 0 ———> Auto mode now. Stand-Alone Mode (Sound Mode):

. ON means Sound control.

To set the fixture in sound mode, When display R.001 ———> Press "UP" 4 times to confirm display reads RUd1 ———> confirm the display reads . " ON " ———> press Esc to confirm the display reads R.001 ———> press "UP" 5 times to confirm display reads .E5L ———> Press "Enter" 2 times to confirm display reads R.u 0 ———> Sound control now.

#### DMX Mode

1. Press "ESC" one or some times till show "A.001", then press "UP" or "DOWN" to view other items.
2. Press "ENTER", letter "A", press "UP" or "DOWN" to choose DMX address "001---512", press enter to confirm or "ESC" to exit.
3. Set the address to "001" to accept the master/slave mode.

# LED Moving head light

## USER MANUAL



# 1. BEFORE YOU BEGIN

What is included

- 1X spot LED
- User Manual

## Unpacking instructions

Immediately upon receiving a fixture, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

## AC Power

To determine the power requirements of a particular fixture, see the label affixed to the back plate of the fixture or refer to the fixture's specifications chart. A fixture's listed current rating is its average current draw under normal conditions. All fixtures must be powered directly off a switched circuit and channed is used solely for a 0% to 100% switch. Before applying power to a fixture, check that the source voltage matches the fixture's requirement. Check the fixture or device carefully to make sure that if a voltage you will use.

**Warning!** Verify that the voltage select switch on your unit matched the line voltage applied. Damage to your fixture may result if the line voltage applied does not match the voltage indicated on the voltage selector switch. All fixtures must be connected to circuits with a suitable Earth Ground.

Not all fixtures have a voltage select switch, Please be sure to connect to the proper voltage.

## Safety instructions

Please read these instructions carefully, it includes important information about the installation, use and maintenance of this product.

- Please keep this User Guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.
- Always make sure that you are connecting at the proper voltage, and that the line voltage you are connecting to is not higher than that stated on the decal or rear panel of the fixture.
- This product is intended for indoor use only!
- To prevent risk of fire or shock, do not expose fixture to rain or moisture.
- Make sure there are no flammable materials close to the unit while operating.

- The unit must be installed in a location with adequate ventilation, at least 20in(50cm) from adjacent surfaces. Be sure that no ventilation slots are blocked.
- Always disconnect from power source before servicing or replacing fuse and be sure to replace with same fuse size and type.
- Secure fixture to fastening device using a safety chain. Never carry the fixture solely by its head. Use its carrying handles.
- Maximum ambient temperature (T<sub>a</sub>) is 104°F (40°C). Do not operate fixture at temperatures higher than this.
- In the event of a serious operating problem, stop using the unit immediately.
- Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.
- Don't connect the device to a dimmer pack.
- Make sure the power cord is never crimped or damaged.
- Never disconnect the power cord by pulling or tugging on the cord.
- Avoid direct eye exposure to the light source while it is on.

## 2. INTRODUCTION

### Features

#### CONTROL FEATURES

- DMX-512 LED moving yoke
- Pan: 540°/tilt: 270°
- RGB color mixing
- Variable electronic strobe
- Variable electronic dimmer (0-100%)
- Vector speed channel for pan/tilt, RGB color mixing and color macros
- Built-in movement macros via master/slave or DMX

#### ADDITIONAL FEATURES

- User-selectable basic or advanced operating modes
- USER-selectable pan/tilt ranges  
Pan: 540°, 360°, 180°      Tilt: 270°, 180°, 90°

## 3. SETUP

Disconnect the power cord before replacing a fuse and always replace with the same type fuse

### Fuse Replacement

With a flat head screwdriver wedge the fuse holder out of its housing. Remove the damaged fuse from its holder and replace with exact same type fuse. Insert the fuse holder back in its place and reconnect power.

### Fixture Linking

You will need a serial data link to run light shows of one or more fixtures

## Setting up a DMX Serial Data Link

1. Connect the (male) 3 pin connector side of the DMX cable to the output (female) 3 pin connector of the controller.
2. Connect the end of the cable coming from the controller which will have a (female) 3 pin connector to the input connector of the next fixture consisting of a (male) 3 pin connector.
3. Then, proceed to connect from the output as stated above to the input of the following fixture and so on.


### DMX Data Cables

Order Code	Description
DMX1.5	DMX Cable 1.5m/4.9ft
DMX4.5	DMX Cable 4.5m/14.8ft
DMX10	DMX Cable 10m/32.8ft

## Master /Slave Fixture Linking

1. Connect the (male) 3 pin connector side of the DMX cable to the output (female) 3 pin connector of the first fixture.
2. Connect the end of the cable coming from the first fixture which will have a (female) 3 pin connector to the input connector of the next fixture consisting of a (male) 3 pin connector. Then, proceed to connect from the output as stated above to the following fixture and so on

DMX OUT DMX IN DMX OUT DMX IN DMX OUT DMX IN

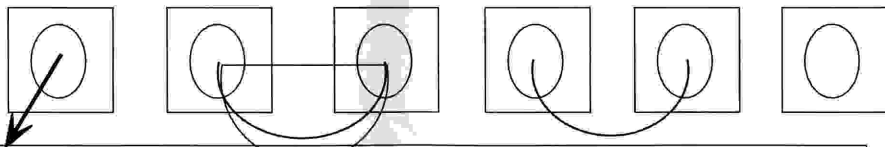

Often, the setup for Master-Slave and Stand alone operation requires that the first fixture in the chain be initialized for this purpose via either the settings in the control panel or DIP-r switches. Secondly, the fixtures that follow may also require a slave setting. Please consult the "Operating Instructions" section in this manual for complete instructions for this type of setup and configuration.

## Mounting

### ORIENTATION

This fixture may be mounted in any position provided there is adequate room for ventilation.

### RIGGING

It is important never to obstruct the fan or vents pathway. Mount the fixture using a suitable "C" or "O" type clamp. Adjust the angle of the fixture by loosening both knobs and tilting the fixture. After finding the desired position, tighten both knobs.

When selecting installation location, take into consideration lamp replacement access and routine maintenance.

Safety cables must always be used.

Never mount in places where the fixture will be exposed to rain, high humidity, extreme temperature changes or restricted ventilation.

## 4. OPERATING INSTRUCTIONS

### Navigating the Control Panel

Access control panel functions using the four panel buttons located directly underneath the LED Display.

Button	Function
<MODE/ESC>	Used to access the menu or to return to a previous menu option
<UP>	Scrolls through menu options in ascending order
<DOWN>	Scrolls through menu options in descending order
<ENTER>	Used to select and store the current menu or option within a menu

MODE/ESC UP DOWN ENTER

The control Panel LED Display shows the menu items you select from the LED Display Function Menu on page #11. When a menu function is selected, the display will show immediately the first available option for the selected menu function. To select a menu item, press <ENTER>. Press the <MODE/ESC> button repeatedly until you reach the desired menu function. Use the <UP> and <DOWN> buttons to navigate the menu options. Press the <ENTER> button to select the menu function currently displayed, or to enable a menu option. To return to the previous option or menu without changing the value, press the <MODE/ESC> button.

### LED Display Function Menu

When navigating the menu:

Use the "UP" button to move up.

Use the "DOWN" button to move right.

Use the "MODE" button to move left, or to scroll through the left-most items.

### User Configurations

#### TO SET THE PAN TO INVERTING OR NON-INVERTING:

1. Press "ENTER" first, Use the Up/Down buttons to set to the desired version.
2. Need Inverting please selection "On". Need Non-Inverting please selection "OFF". Press "ENTER" to confirm. Press "ESC" to exit.

#### TO SET THE TILT TO INVERTION OR NON-INVERTING:

1. Press "ENTER" first, use the Up/Down buttons to set to the desired inversion.