

How to control the fixture

There are three ways to control the fixture

Universal DMX controller

The fixture can be set the DMX address remotely by universal DMX controller. First, you

need to programming two scenes into a chase, and then link the fixtures to the universal

DMX controller. When you run the chase, all the fixtures of the chain will be set the series

DMX address automatically, If you use a controller with 3 pins DMX connector, you need

to use a 3 to 3 pin adapter. The fixture uses seven channels. Please refer to the following diagram to use your controller to activate the fixture.

Light
BIG
DESIGN BY GERMANY

LED LIGHTING

DMX512



CE

RoHS

WEEE

LED LIGHT

BM-022



User Manual

Please read the instructions carefully before use

LED EFFECT LIGHT

Thank you for choosing led effect light. Please read the instruction carefully before using the unit.

Input: 220V/ 50-60 Hz

Out put:50W

BM-022 LED:187 pcs (R52 G57 B36 w42) super bright led 5mm

Address:

NO	OFF	FUNCTION
10	1,2,3,4,5,6,7,8,9,	DMX512
	1,2,3,4,5,6,7,8,9,10	AUTO control
9	1,2,3,4,5,6,7, 8,10	Sound control(adjustable)
8	1,2,3,4,5,6, 7,9,10,	AUTO control
7	1,2,3,4,5,6 ,8,9,10	AUTO control
6	1,2,3,4,5,6,8,9,10	AUTO control
2,3,4,5	5,6,7,8,9,10	AUTO control

Channel function

DMX 512: 14 channel:

- CH 1, 0---255(R.G.B.W.R) **AUTO control** (Pre-program)
- CH 2. 0-----255 **Dimmer**
- CH 3 . 0-----255 **STROBE**
- CH 4, 0-----255(R.G.B.W.R)(Pre-program)
- CH 5 0-----255 (G.B.W.R.G.) (Pre-program)
- CH 6 0-----255 (G.B.W.R.G.) (Pre-program)
- CH 7 0-----255 (G.B.W.R.G.) (Pre-program)
- CH 8 0-----255 (G.B.W.R.G.) (Pre-program)
- CH 9 0-----255 (G.B.W.R.G.) (Pre-program)
- CH 10 0-----255 (G.B.W.R.G.) (Pre-program)
- CH 11 0-----255 (G.B.W.R.G.) (Pre-program)
- CH 12 0-----255 (G.B.W.R.G.) (Pre-program)
- CH13 0----255 (G..B.W.R.G.) **AUTO control** (Pre-program)
- CH14 0----255 (G..B.W.R.G.) **AUTO control** (Pre-program)