

Warranty Card Name Model Production Purchase End User Company Name: Add: Sale Store Link man: Tel: Stamp

Description: These must be truthfully fill, seal by the end-user and point-of-sale, or else the warranty will not work (warranty period and terms, see the following)

warranty period: one year since purchase warranty terms: 1. If fail when using the product in normal state, you can made under the provisions of the warranty, show the warranty card and purchase bills(copy), and enjoy free maintenance service in a specific service center or the manufacturer.


- 2. The following will be the implementation of paid service:
- (1) Without the effective warranty card
- (2) There's blank, alter and no point-of-sale name
- (3) Fail caused by something can not resistance
- (4)Fail caused by transportation or unloading
- (5)Fail caused by not operate by manual
- (6)Fail caused by disassemble without unauthorized
- (7) Fail caused by using the unauthorized control system

Note:

Based on our company continue to improve the product, the statement containing data may have changed, and will not notice the change any more. Company retains its right to change specifications related when product is improved. Thanks for your understanding.

USER MANUAL

BM-MH-LED132spot 132W(60W+72W) (60W Spot and Wash Mixing Moving Head)

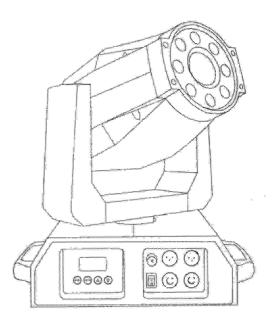

This manual contains important information. Please read before operating fixture.





1 SECURITY TIPS

WARNING!!! To reduce the risk of fire, electric shock, or injury to persons, follow these important safety instructions:

- Non-professionals are not to disassemble the moving head LED unit and lighting accessories inside.
- Rated voltage range: AC110V-120V/60Hz or AC200V-240V / 50HZ (to be selected).
- The unit should not be placed near flammable materials and should maintain at least 1M distances from its projection area.
- The moving head should only be used in ambient temperature: -15c > 40c, the highest temperature of the surface of the lamp: 60c.
- To keep away from the liquid substance and humid environment.
- Before using the moving head please ensure a good earth is fitted.
- The installation of the moving heads, you must check fixing screw fasteners with additional security cable and a regular inspection done.
- LED consecutive working hours is not recommended for more than 10 hours per time.
- Moving head should not be used in time when unusual conditions are in play.
- Moving head should be regular inspected of the rotation, external accessories and paste parts, in a timely manner to prevent accident or damage to the unit or persons.
 - Moving head fans should be checked weekly as it is easy to accumulate the dust, so weekly cleaning of especially the cooling air opening and fans, otherwise unit my over heat and cause damage.

2 TECHNOLOGY REFERENCE

1. Voltage: AC220-240V/110-120V/50~60Hz

2. Power consumptions: 320w

3. Profile LED Source: Ultra bright Luminus60w LED

4. Wash LED Source: 8x9w tricolor LED

5. Input:220V/50HZ Output: 24v/12V/5V

6. Product size: 33×40×50cm; Package size: 46x39x45cm


7. N.W:12.5Kg; G.W: 14 Kg

3 FUNCTIONS INTRODUCTION


- 1. International universal control signal:
- 2. DMX512
- 3. 34/31/16 DMX channels
- 4. Digital display
- 5. DMX, Sound, Auto, Slave/Maste
- 6. 2 Gobos wheels: Fixed gobo wheel&Rotating gobo wheel
- 7. 7 gobos+White with Bi-directional rotate effect
- 8. Color wheel: 7 main colors+open with the rainbow
- 9. One rotationg 3-facet prism
- 10. RGB color mixing
- 11. Program inside ,Adjustable flash frequency

4 DISPLAYCODE SETTING METHOS

60W Spot and Wash Mixing Moving head button

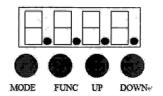

MENU

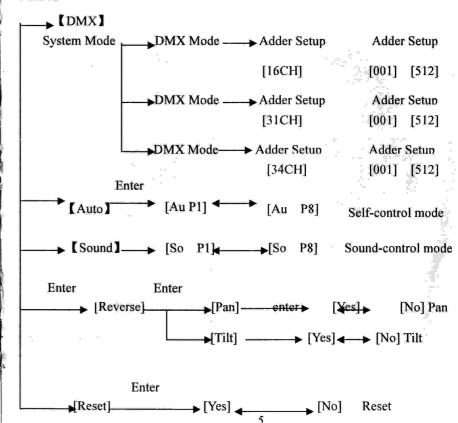

DMX CHANNEL SHEET

16CH	31CH	34CH	Function	Channel Value	Function
				0-15	No action
				16-45	Internal running I
٠,		e e		46-75	Internal running 2
			self-setting	76-105	Internal running 3
CH1		СН1	Program	106-135	Internal running 4
				136-165	Internal running 5
			2	166-195	Internal running 6
				196-225	Internal running 7
	1999			226-255	Internal running 8
CH2	CH1	CH2	Pan	0-255	0-540°
СН3	CH2	СН3	Tilt	0-255	0-270°
СН4		СН4	Pan Fine Tilt	0-255	Pan Fine
CH5		CH5	Tilt Fine	0-255	Tilt Fine
СН6	СН3	СН6	X, Y speed Adjustment	0-255	From fast to slow
CH7	CH4	CH7	Profile Dimmer	0-255	From dark to bright
			,	0-7	Turn on
CH8	CH5	CH8	Profile Strobe	8-250	Strobe from fast to slow
			"	251-255	Turn off
				0-15	Color 1
	:		×	16-31	Color 2
				32-47	Color 3
СН9	СН6	СН9	Color: 7several+	48-63	Color 4
C115	CHO	СПЭ	White Lighting	64-79	Color 5
		٠.	wante Eightang	80-95	Color 6
	: .		* * .	96-111	Color 7
				112-127	Color 8
				128-255	Color from fast to slow

СН7	СН10	7 Static Gobos + Open
CH8	СНП	7 Rotating Gobos + Open

CH10

CHII

		16-23
		24-31
		32-39
		40-47
	ı ×	48-55
		56-63
		64-71
	7 Static Gobos +	72-79 80-87
	Open	88-95
		96-103
		104-111
		112-119
		120-127
		192-255
١		0-15
		16-31
١		32-47
٠		48-63
	7 Rotating	64-79
	Gobos + Open	80-95
		96-111
		112-127
		128-191
		192-255

0 /	Open
8-15	Gobo 1
16-23	Gobo 2
24-31	Gobo 3
32-39	Gobo 4
40-47	Gobo 5
48-55	Gobo 6
56-63	Gobo 7
64-71	Gobo 7 shake speed
	from slow to fast
72-79	Gobo 6 shake speed
	from slow to fast
80-87	Gobo 5 shake speed
	from slow to fast
88-95	Gobo 4 shake speed
	from slow to fast
96-103	Gobo 3 shake speed
	from slow to fast
104-111	Gobo 2 shake speed
1	from slow to fast
112-119	Gobo 1 shake speed
	from slow to fast
120-127	Open
192-255	Gobo positive and
	negative running from
	slow to fast
0-15	White Lighting
16-31	Gobo 1
32-47	Gobo 2
48-63	Gobo 3
64-79	Gobo 4
80-95	Gobo 5
96-111	Gobo 6
112-127	Gobo 7
128-191	Wheel CW Fast > slow

Wheel CCW Fast >slow

0-7

Open

				0-15	Stop
CH12	CH9	CH12	Gobo Rotation	16-136	Gobo CW slow to fast
				137-255	Gobo CCW slow to fast
CH13	-CH10 -	CH13	Focus	0-255	focus from near to far
CH14	CH11	CH14	Prism	0-63	Open
CH14	CHII	CH14	Prism	64-255	Prism In
				0-15	Stop
CH15	CH12	CH15	Prism Rotation	16-136	Rotate CW slow > fast
				137-255	Rotate CCW slow > fast
	СН13	CH16	Wash Global Dimmer	0-255	From dark to bright
	CH14	CH17	Global Red	0-255	From dark to bright
	CH15	CH18	Global Green	0-255	From dark to bright
A	CH16	CH19	Global Blue	0-255	From dark to bright
			a Ar	0-7	No action
	12.7		46.7	8-15	Color 1
	12	13.4	100	16-23	Color 2
ii:			1 Total	24-31	Color 3
	0.00	1 1 349		32-39	Color 4
	鄭.	1 2 2 2	5.	40-47	Color 5
	Ř.		- T - 1 T - 1	48-55	Color 6
- 6	(A)			56-63	Color 7
g/f			1440	64-71	Color 8
		GYYDA	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	72-79	Color 9
256	CH17	CH20	Pre set RGB	80-87	Color 10
100			color	88-95	Color 11
1.17				96-103	Color 12
1.30	10 15			104-111	Color 13
1.344				112-119	Color 14
hada i	l Y	List and		120-127	Color 15
118.4				128-135	Color 16
1000		k Page	10 July 19	136-195	Color gradually change
1000	1944				from slow to fast
Port 1	₩			196-255	Color suddenly change
					from slow to fast
		.			1

2 .		management of the first	and the second second		
- 1	CH18	CH21	Global Strobe	0-255	From slow to fast
	CH19	CH22	Red Zone 1	0-255	From dark to bright
-	CH20	CH23	Green Zone 1	0-255	From dark to bright
	CH21	CH24	Blue Zone 1	0-255	From dark to bright
	CH22	CH25	Red Zone 2	0-255	From dark to bright
	CH23	CH26	Green Zone 2	0-255	From dark to bright
	CH24	CH27	Blue Zone 2	0-255	From dark to bright
	CH25	CH28	Red Zone 3	0-255	From dark to bright
	CH26:	CH29	Green Zone 3	0-255	From dark to bright
11.	CH27	СН30	Blue Zone 3	0-255	From dark to bright
	CH28	CH31	Red Zone 4	0-255	From dark to bright
7.0	CH29	СН32	Green Zone 4	0-255	From dark to bright
	СН30	СН33	Blue Zone 4	0-255	From dark to bright
CH16	CH31	CH34	Reset	250-253	Reset
7 7 1					40.00

6 DIFFICULTY RESOLUTION

The following is a list of problems and resolutions, should only be preformed by professionally qualified staff.

- 1. Bulb not working
 - a) Check whether approaching the service life of LED, then change it
 - b) Check whether LED circuitry is not loss or connect poorly
- 2. Beam appears flash or is patchy
 - a) The LED maybe approach the service life, then change it, or the optical components are unclean.
 - b) LED has an accumulation of dust, so the LED and other parts inside the lamp should be cleaned and maintained in regular period.
- 3. LCD Display works intermittently
 - a) Check whether the fan running
 - b) Check inner temperature-response control plug is off
 - c) Check whether the circuitry is good and contacted properly
- 4. The computer lamp not controlled by controller during lighting
 - a) Check numeral starting address and the connection of communication control circuit
 - b) The corresponding channel button of controller is open or not
 - c) Check whether the fuse on power supply input jack is broken off

7 CLEANING

To make sure the stable run of the moving head, you should keep it clean.

All fans, lens and color filters, do not use any soluble detergent when

cleaning the color filter avoiding the damage to LED...

8 AFTER SERVICE

- 1. BIG company offer technical consultation to customers.
- 2. If the machine is wrong and need repairmen, please truthfully fill in the related content and feedback us the problems timely, as well as we have to improve the product.
- 3. In addition to stage light, also matching accessories are as follows: accessories: 1x Power cable

1x Signal cable

1x Users manual

2x Hanging Bracket

1x Safety cable