


LED BAR LIGHT 252*10MM

User Manual

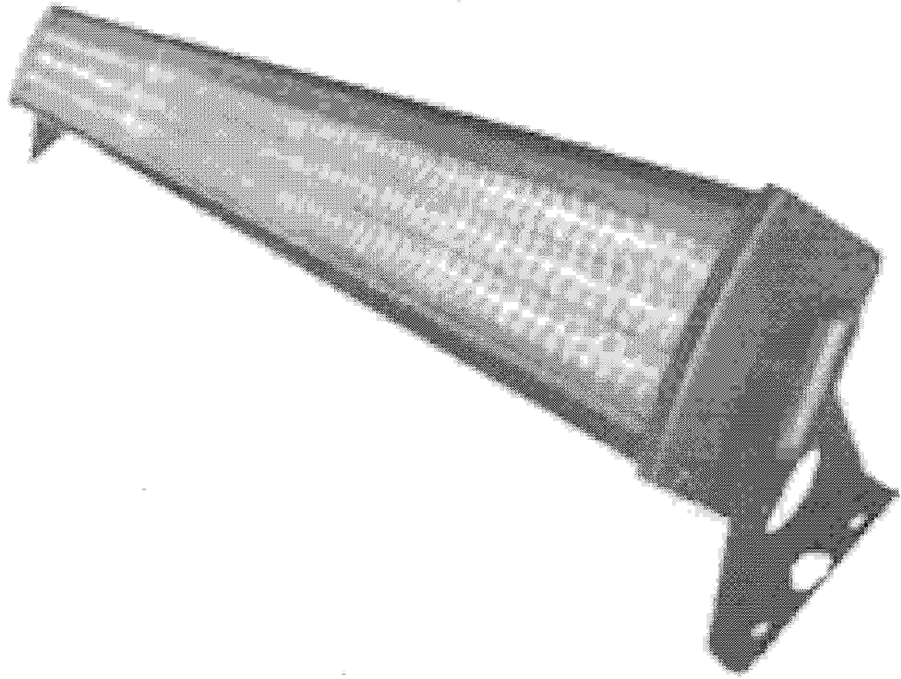

BM-LED 252*10MM

Introduction

Thank you for choosing our LED Wall Washer IP34. If you follow the introductions given in this manual, we are sure you will enjoy the device for a long period of time. Unpack your LED Wall Washer IP34. Check carefully the content of the box and contact immediately your forwarder in case of damage

The following items are included in the box:

1, LED Wall Washer IP34

1, user manual

Main features

Power Supply: 230V 50Hz

Power: 20W

LED: 252pcs x 10mm

Channel mode: 3CH, 6CH, 12CH, 24CH, 48CH

Safety Warning

Every person involved with the installation, operations and maintenance

of this product Has to know:

This product must be installed by a qualified professional.

This product left the place of manufacture in perfect condition. In order to maintain this condition and for safe operation, the user must always follow the instructions and safety warnings described in this user manual.

Manufacturer will not with responsibility for those operation not according to this instruction.

Operation attention.

Do not connect power cable of other electric products with this product.

Always make sure that you are connecting to the power voltage and that the line voltage you are connecting is not higher than that stated on the decal or rear panel of the product.

Always ground (earth) the fixture electrically.

During long periods of non-use, disconnect the product's main power.

Do not attempt to operate this product if the power cord has been frayed or break.

There are no user serviceable parts inside the unit. Do not open the housing or attempt any repairs yourself.

Avoid looking directly into the light source.

Always mount this unit in safe and stable matter.

- When suspending the product above ground level, verify that the product can hold at least 10 times the weight of all installed devices.
- Avoiding hit the product when you are move or install the product.
- If the exterior cord of the fixture is damaged, it must be replaced by manufactory, agent or a qualified technician.

Menu Function

MENU	VALUE	FUNCTION
Addr	000-512	Setting DMX addresses
Chnd	3CH	R+G+B
	6CH	R+G+B+Auto
	12CH	Module color selection
	24CH	Module color selection
	48CH	Module color selection
Slav	Nase	Slave mode
	SL 1	Slave mode
	SL 2	Slave mode
Auto	At 0-At11	Auto program
Colo	Red	0-255
	Gree	0-255
	Blue	0-255
Uer	U110	

DMX512 controller instruction

3 channels:

Channel	Value	Function
1	0-255	Red 0-100%
2	0-255	Green 0-100%
3	0-255	Blue 0-100%

6 channels:

Channel	Value	Function
1	0-255	All dimming
2	0-255	Strobe
3	0-255	Red 0-100%

4	0-255	Green 0-100%
5	0-255	Blue 0-100%
6	0-255	Auto program

12 channels:

Channel	Value	Function
1	0-255	All dimming 1
2	0-255	Strobe
3	0-255	Red 1 0-100%
4	0-255	Green 1 0-100%
5	0-255	Blue 1 0-100%
6	0-255	Auto program
7	0-255	All dimming 2
8	0-255	Strobe
9	0-255	Red 2 0-100%
10	0-255	Green 2 0-100%
11	0-255	Blue 2 0-100%
12	0-255	Auto program

24 channels:

Channel	Value	Function
1	0-255	All dimming
2	0-255	Strobe
3	0-255	Red 0-100%
4	0-255	Green 0-100%
5	0-255	Blue 0-100%
6	0-255	Auto program
7	0-255	All dimming
8	0-255	Strobe
9	0-255	Red 0-100%
10	0-255	Green 0-100%
11	0-255	Blue 0-100%
12	0-255	Auto program
13	0-255	All dimming
14	0-255	Strobe

15	0-255	Red 0-100%
16	0-255	Green 0-100%
17	0-255	Blue 0-100%
18	0-255	Auto program
18	0-255	All dimming
20	0-255	Strobe
21	0-255	Red 0-100%
22	0-255	Green 0-100%
23	0-255	Blue 0-100%
24	0-255	Auto program

48 channels:

Channel	Value	Function
1	0-255	All dimming 1
2	0-255	Strobe
3	0-255	Red 1 0-100%
4	0-255	Green 1 0-100%
5	0-255	Blue 1 0-100%
6	0-255	Auto program
7	0-255	All dimming 2
8	0-255	Strobe
9	0-255	Red 2 0-100%
10	0-255	Green 2 0-100%
11	0-255	Blue 2 0-100%
12	0-255	Auto program
13	0-255	All dimming 3
14	0-255	Strobe
15	0-255	Red 3 0-100%
16	0-255	Green 3 0-100%
17	0-255	Blue 3 0-100%
18	0-255	Auto program
18	0-255	All dimming 4
20	0-255	Strobe
21	0-255	Red 4 0-100%

22	0-255	Green 4 0-100%
23	0-255	Blue 4 0-100%
24	0-255	Auto program
25	0-255	All dimming 5
26	0-255	Strobe
27	0-255	Red 5 0-100%
28	0-255	Green 5 0-100%
29	0-255	Blue 5 0-100%
30	0-255	Auto program
31	0-255	All dimming 6
32	0-255	Strobe
33	0-255	Red 6 0-100%
34	0-255	Green 6 0-100%
35	0-255	Blue 6 0-100%
36	0-255	Auto program
37	0-255	All dimming 7
38	0-255	Strobe
39	0-255	Red 7 0-100%
40	0-255	Green 7 0-100%
41	0-255	Blue 7 0-100%
42	0-255	Auto program
43	0-255	All dimming 8
44	0-255	Strobe
45	0-255	Red 8 0-100%
46	0-255	Green 8 0-100%
47	0-255	Blue 8 0-100%
48	0-255	Auto 8 program